


Rowenta®

PRO IRON

STEAM STATION



www.rowentausa.com

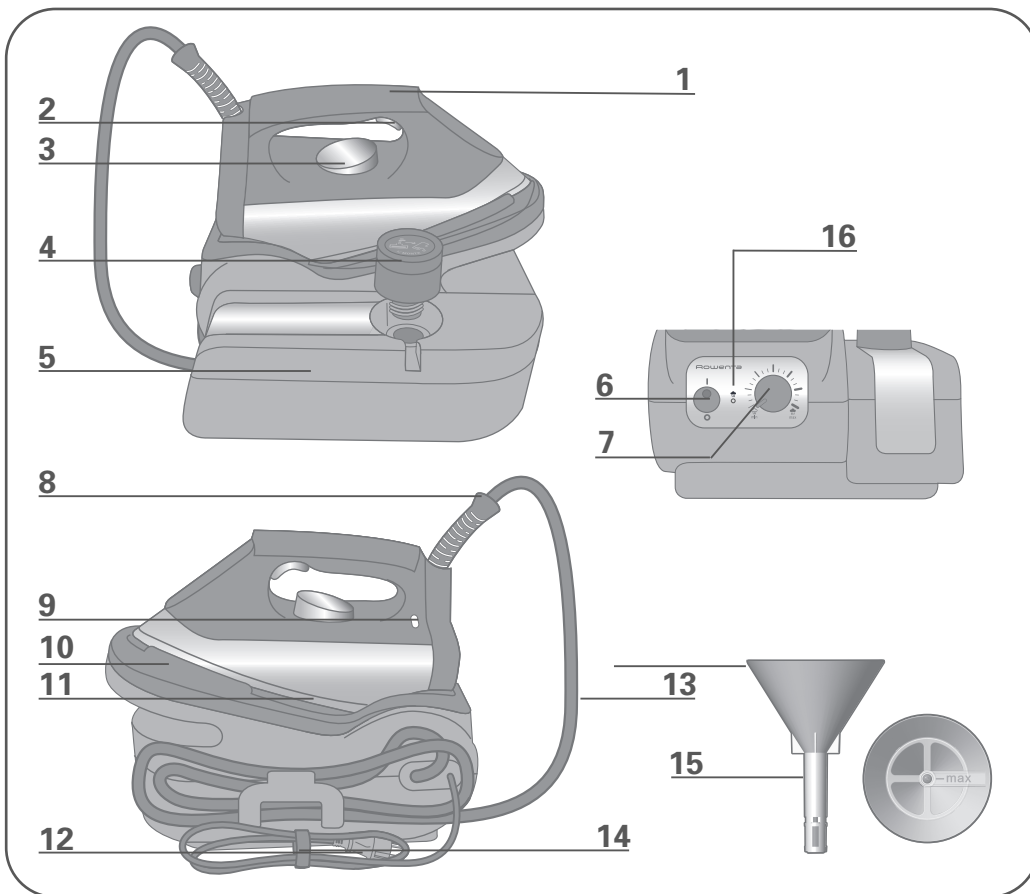


DESCRIPTION


- | | |
|------------------------------|--------------------------------|
| 1. Iron handle | 9. Temperature indicator light |
| 2. Steam trigger | 10. Iron rest |
| 3. Temperature control dial | 11. Stainless steel soleplate |
| 4. Boiler cap | 12. Power cord |
| 5. Boiler unit/water tank | 13. Steam hose |
| 6. On/Off switch | 14. Plastic Velcro |
| 7. Steam output control dial | 15. Water funnel |
| 8. Connection cord | 16. Steam ready light |



A Filling the boiler

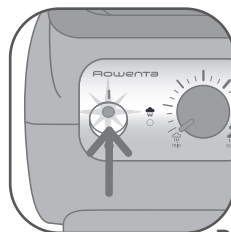

B Turning the
appliance on

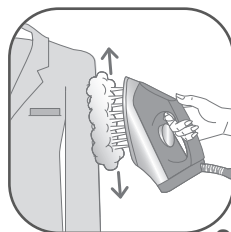

C Vertical steaming



D Rinsing out
the boiler

WELCOME TO THE ROWENTA WORLD!

Congratulations on choosing the ROWENTA Pro Iron steam station to care for your garments!

Founded in Germany in 1884, Rowenta has a long history of innovation. We create high-performance household appliances with graceful designs that can be found all around the world.

The ROWENTA Pro Iron steam station enables you to get professional results at home in no time. Its powerful steam output ensures perfect steam penetration deeply into fabrics, while the stainless steel soleplate dries them instantly in just one pass leaving impeccable results.

With the ROWENTA Pro Iron steam station, you do not have to be an expert anymore to get great results!

OUR ADVICE:

To enjoy and discover how to use your Pro Iron steam station, we advise you to read through the product instructions before first use.

IMPORTANT SAFETY INSTRUCTIONS

When using your appliance, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use appliance only for its intended use.
 2. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
 3. The appliance should always be turned off before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet, instead grasp plug and pull to disconnect.
 4. Do not let the power cord touch hot surfaces. Let the Pro Iron steam station cool completely before putting it away. Wind up the power cord and attach it with the plastic Velcro.
 5. Always disconnect appliance from electrical outlet when filling or emptying when not in use.
 6. Do not operate appliance with a damaged cord or if appliance has been dropped or damaged.
 7. To avoid the risk of electric shock, do not disassemble the appliance. Contact Rowenta Consumer Services or take it to a qualified service person for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.
 8. Close supervision is required for any appliance used by or near children. Do not leave the iron unattended while the appliance is connected or on an ironing board.
 9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a Pro Iron steam station upside down. There may be hot water in the reservoir.
 10. This is a 1750 watts appliance. To avoid a circuit overload, do not operate a Pro Iron steam station on the same circuit with another high wattage appliance.
 11. If an extension cord is absolutely necessary, a cord with 15A or greater shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
- Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- For your safety, this appliance conforms to the applicable standards and regulations (Low Voltage, Electromagnetic Compatibility, Environmental Directives, as applicable...).
- Your Pro Iron steam station is an electrical appliance: it must be used in normal conditions of use.
- It is fitted with 2 safety systems:
- A pressure release valve which, in the event of a malfunction, releases any excess steam.
 - A thermal fuse to prevent the appliance from overheating.
- Always plug your Pro Iron steam station into:
- An electrical installation with voltage 120V.
- Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee.
- The appliance must not be left unattended while it is connected to the outlet.
 - The plug must be removed from the outlet before the water reservoir is filled with water.
 - The appliance must be used and rested on a stable surface.
 - When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.
 - The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.

- Do not direct steam at people, animals or iron clothes while they are being worn.
 - Never attempt to unscrew the boiler cap while the appliance is in use.
- The strong steam pressure could result in burns. Only unscrew the cap when steam station is cold or there is no more pressure in the boiler.

SAVE THESE INSTRUCTIONS

BEFORE USE

Please read all of the instructions for use and the Important Safeguards carefully. Remove all packaging from the steam station. It is normal for a small amount of smoke and a light odor to be produced the first time it is used. This will quickly disappear.

1 • Water recommendations

Tap water

Rowenta irons are designed to be used with REGULAR TAP WATER (up to 12 grains per gallon of hardness – contact your local water company). If your water is harder than this, Rowenta recommends mixing half tap water with half distilled water which reduces the hardness; or just use inexpensive bottled spring water.

Softened water

There are many types of household water softeners and the water from many of them is perfectly acceptable for use in the Pro Iron steam station. However, some types of softeners, particularly those that use chemicals such as salt, can cause the appliance to leak or spit during use. If you experience this type of problem, we recommend that you try using inexpensive bottled spring water or untreated tap water. Once you have changed water it will take several uses to correct the problem. Rowenta recommends trying the steam function for the first time on an old towel or cloth that can be discarded to avoid potentially damaging your clothes.

Always remember :

Water containing additives (such as starch, perfume or fabric conditioner) will not be used. Such additives can affect the properties of the steam and at high temperatures can form deposits in the steam chamber which

may mark the laundry when they are emitted through the steam vents.

Descaling liquids/agents should not be used.

2 • Filling the boiler

The Pro Iron steam station is designed to operate using tap water. (A).

While unplugged, place the Pro Iron steam station on a stable horizontal, heat resistant surface.

Unscrew the boiler cap.

To prevent overflow during filling, use the water funnel provided in the packaging. Fill slowly with water until the red ball reaches the « max » level. Do not fill water tank past the base of the boiler cap thread. Do not overfill. Be sure that water does not spill over. If this occurs remove the excess water.

Replace the boiler cap and screw it on firmly but be careful to not over tighten.

Over tightening can damage the **green** O-ring.

To fill boiler while you are using the appliance see section "Filling boiler while in use".

USE

3 • Turning on and off

Plug the Pro Iron steam station into a 120 volt electric outlet.

Press on/off switch up (B), the iron light and steam indicator light will turn on.

When the steam indicator light turns off (approximately 11 minutes), steam is ready.

During ironing the temperature indicator light for the iron and the steam indicator light will turn on and off. This is normal as the temperature is being regulated. The unit is still on when these lights go out.

To turn the unit off, press on/off switch down. Unplug and leave to cool completely before emptying or putting away. Set the temperature control dial on the iron to the minimum setting before unplugging.




4 • Steam ironing

Never iron or steam clothes while they are being worn.

The appliance allows steam output to be adjusted.

- setting on the iron : the steam control dial should be set to min.
- setting on the iron : the steam control should be set at the mid level.
- setting on the iron : the steam control dial can be set to the max.

Table 1

TYPE OF FABRIC	IRON THERMO-STAT SETTING	STEAM CONTROL DIAL SETTING
LINEN, COTTON, JEANS	•••	
WOOL, SILK	••	
SYNTHETIC (Viscose, Polyester)	•	

Note : It is normal for the connection cord to become warm during use.

Before using the Pro Iron steam station for the first time or if you have not used the steam function for a few minutes, press the steam button several times in a row while holding the iron away from your clothes. This will enable any cold water to be removed from the steam connection cord. When ironing start with fabrics that require a low temperature setting (•) and finish with those which need the highest temperature (•••).

Mixed fiber fabrics should be ironed on the temperature for the most delicate fabric. For example a shirt that is 60% cotton and 40% polyester should be ironed at the (•) setting for synthetics.

If spray starch is used, spray it onto the reverse side of the garment. Allow starch to penetrate before ironing.

For best results, use a mesh type ironing board to allow excess steam to escape. For delicate fabrics, we recommend carrying out a test on an unobtrusive area of the garment such as an inner steam.

5 • Dry ironing

This appliance can be used for dry ironing if the steam trigger is not pressed and the steam control dial is set to min.

6 • Vertical steam

To remove wrinkles in cotton or linen, the soleplate can come into contact with the fabric for optimal results.

For synthetic fabrics, a distance of 4 inches is recommended to protect the garment.

For delicate fabrics, we recommend carrying out a test on an unobtrusive part of the garment (inner steam).

Caution : Steam produced is very hot. To avoid burns and scalding never iron or steam clothes while they are being worn.

Fill iron according to the "Filling the boiler" section of instructions.

Press on/off switch up (B), the iron light and steam indicator light will turn on.

When the steam indicator light turns off (approximately 11 minutes), steam is ready.

Hang the garment on a coat hanger and hold the fabric from the bottom of the garment slightly taut with one hand.

Holding the iron in a vertical position, press continuously the steam trigger while moving the iron from the top of the garment to the bottom (C).

If unit is left on without steaming for a length of time, water can condense in the hose and droplets of water can be seen when you begin to use the Pro Iron steam station again. For best results simply aim the iron away from yourself, other people, animals and clothing and press the trigger for a few seconds to remove the condensation and steam begins to fill the hose.

7 • Filling the boiler while in use

Caution : Never unscrew the boiler cap while iron is producing steam and boiler is under pressure.

Before opening the boiler, ensure that there is no steam inside. To do this, ensure the unit is turn on, press the steam trigger and keep it pressed until there is no more steam.

Turn the unit off (see section "Turning On and Off") and unplug from outlet.

Slowly unscrew the boiler cap. To prevent overflow during filling, use the water funnel provided in the packaging. Fill slowly with water until the red ball reaches the « max » level. Do not fill water tank past the base of the boiler cap thread. Be sure that water does not spill over. If this occurs remove the excess water. Install the boiler cap and screw it on tightly but be careful not to over tighten. Over tightening can damage the **green** O-ring. Plug back in to electrical outlet.

8 • After ironing

Turn the unit off. (Consult section “Turning On and Off”).

Unplug the appliance.

Place the iron on the iron rest and allow to cool completely which will take approximately **1 hour**.

Once cold, empty water from the appliance before storing. We recommend emptying the boiler when not in use.

MAINTENANCE AND CLEANING

Before cleaning ensure that the appliance is unplugged and completely cool down. The iron can be cleaned with a damp cloth and wiped dry. Never use household cleaners, descalers or solvents.

9 • Cleaning the soleplate

In normal use a draggy coating may build up on the soleplate (starch, detergent buildup, burnt synthetic fibers). This can be easily removed by using the Rowenta Soleplate Cleaning Kit or a quality hot iron soleplate cleaner available at most stores.

To prevent scratching the soleplate, do not iron over sharp objects (zippers, etc.). Do not place the iron on rough surfaces, e.g. metal iron support, which may scratch the soleplate.

Always put the iron with the soleplate down on the iron rest, never place on its heel.

10 • Rinsing out the boiler



Do not use descaling agents.

To ensure optimum steam performance, the boiler must be rinsed out after every 10 uses. If your tap water is hard increase the frequency. Check that the Pro Iron steam station is unplugged and cold.

Fill the boiler 3/4 full with tap water.

Shake the boiler for a few moments and then empty it over a sink (D).

Repeat the process.

Wipe the Pro Iron steam station base regularly with a damp cloth and wipe dry.

Never hold the Pro Iron steam station under the tap.

Boiler Cap

To ensure a proper seal, please check the green rubber ring in the safety cap for wear and tear regularly. If wear is noted, replace ring. Replacement rings are available through our consumers service department.

TROUBLESHOOTING

Issues	Possible causes	Solutions
When switched on, the unit does not come on and the iron temperature control light is not illuminated	The appliance does not have power.	Check that your appliance is correctly plugged in. Check that power switch is fully set on.
Water runs through the holes in the soleplate.	You are using the steam trigger before the iron is hot enough.	Wait for the iron temperature control light to go out before activating the steam control trigger. If problem persists, decrease steam output, to adapt it to iron temperature level.
	Water has condensed in the hose because you are using steam for the first time or you have not used it for some time.	Pull the steam trigger while holding the iron away from your ironing board until the iron produces steam.
White streaks come through the holes in the soleplate.	The boiler has a build-up of scale because it has not been rinsed out regularly.	Rinse the boiler after every 10 uses (see «cleaning & maintenance») or more if needed.
Brown streaks come through the holes in the soleplate and stain the fabric.	You are using chemical descaling agents or additives in the water for ironing.	Never add this type of product in the water tank or in the boiler (see our recommendations regarding water to be used).
	Your fabric is not rinsed sufficiently after washing or you have ironed a new garment before washing it.	Ensure fabric is rinsed thoroughly after washing to remove any soap deposits or chemicals on new garments.
The soleplate is dirty or brown and may stain the linen.	There is a build up of burnt fiber from ironing at too high a temperature	See prior recommendations in setting temperature controls (Table 1).
There is no steam.	The boiler is empty.	Fill the boiler.
	The steam is not ready	Wait for steam ready light is off
Little steam is visible.	The soleplate temperature is set to the maximum. The appliance is working but steam is very hot and dry. As a consequence, it is less visible.	Reduce iron temperature.
Water streaks appear on the fabric.	Your ironing board is saturated with water because it is not suitable for use with a steam station.	Check that your ironing board is suitable. A mesh top ironing board rather than a perforated top ironing board must be used to allow any excess steam to escape and to avoid steam venting sideways.
Steam escapes from the boiler cap.	Cap screwed on incorrectly. The boiler cap is not tight enough.	When unit is cold, unscrew cap and put back on.
	The seal on the cap is worn.	Check cap regularly for signs of wear and tear to green rubber ring. Replace if wear is noticed. Check that O-ring is not cracked or broken and that you have tightened the boiler cap firmly.

*** USA :** If this troubleshooting does not resolve the issue, before consulting the retailer or returning the product, please telephone Rowenta Consumer Services at 1-800-769-3682. Further hints and tips are obtainable from our homepage www.rowentausa.com

ROWENTA MANUFACTURER'S WARRANTY

 : www.rowenta.com

With a strong commitment to the environment, most of Rowenta products are repairable during and after the warranty period. Before returning any defective products to the point of purchase, please call Rowenta consumer service directly at the phone number below for repair options. Your help to sustain the environment is appreciated!

The Warranty

This product is guaranteed by Rowenta for 1 year against any manufacturing defect in materials or workmanship, starting from the initial date of purchase.

The manufacturer's warranty by Rowenta is an extra benefit which does not affect consumer's Statutory Rights.

The Rowenta warranty covers all costs related to restoring the proven defective product so that it conforms to its original specifications, through the repair or replacement of any defective part and the necessary labor. At Rowenta's choice, a replacement product may be provided instead of repairing a defective product. Rowenta's sole obligation and your exclusive resolution under this warranty are limited to such repair or replacement.

Conditions & Exclusions

The Rowenta warranty only applies within USA, Canada & Mexico, and is valid only on presentation of a proof of purchase. The product can be taken directly in person to an authorized service centre or must be adequately packaged and returned, by recorded delivery (or equivalent method of postage), to a Rowenta authorized service centre. Full address details for each country's authorized service centre are listed on the Rowenta website (www.rowenta.com) or by calling the appropriate telephone number listed below to request the appropriate postal address.

Rowenta shall not be obligated to repair or replace any product which is not accompanied by a valid proof of purchase.

This warranty will not cover any damage which could occur as a result of misuse, negligence, failure to follow Rowenta instructions, use on current or voltage other than as stamped on the product, or a modification or unauthorized repair of the product. It also does not cover normal tear and wear, maintenance or replacement of consumable parts, and the following:

- using the wrong type of water
- scaling (any de-scaling must be carried out according to the instructions for use);
- ingress of water, dust or insects into the product;
- mechanical damages, overloading
- damages or bad results due to wrong voltage or frequency
- accidents including fire, flood, lightning, etc
- professional or commercial use
- damage to any glass or porcelain ware in the product

This warranty does not apply to any product that has been tampered with, or to damages incurred through improper use and care, faulty packaging by the owner or mishandling by any carrier.

The Rowenta manufacturer's warranty applies only for products purchased and used in USA, Canada & Mexico. Where a product purchased in one country and then used in another one:

- a) The Rowenta guarantee duration is the one in the country of usage of the product, even if the product was purchased in another listed country with different guarantee duration.
- b) The Rowenta guarantee does not apply in case of non conformity of the purchased product with the local standards, such as voltage, frequency, power plugs, or other local technical specifications
- c) The repair process for products purchased outside the country of use may require a longer time if the product is not locally sold by Rowenta
- d) In cases where the product is not repairable in the new country, the Rowenta guarantee is limited to a replacement by a similar product or an alternative product at similar cost, **where possible**.

Consumer Statutory Rights

This Rowenta manufacturer's warranty does not affect the statutory rights a consumer may have or those rights that cannot be excluded or limited, nor rights against the retailer from which the consumer purchased the product. This warranty gives a consumer specific legal rights, and the consumer may also have other legal rights which vary from State to State or Country to Country or Province to Province. The consumer may assert any such rights at his sole discretion.

Additional information

Accessories, Consumables and end-user replaceable parts can be purchased, if locally available, as described in Rowenta internet site.

CANADA	MEXICO	U.S.A.
GROUPE SEB CANADA 345 Passmore Avenue Toronto, ON M1V 3N8	GROUPE SEB MÉXICO, S.A. de C.V. Calle Goldsmith 38 401 Piso 4 Polanco, Distrito Federal C.P. 11560 México. RFC GSM8211123P5	GROUPE SEB USA 2121 Eden Road Millville, NJ 08332
1-800-418-3325	(01800) 112 83 25	800-769-3682

 : www.rowenta.com





CANADA

GROUPE SEB CANADA
345 Passmore Avenue
Toronto, ON
M1V 3N8

1-800-418-3325

MEXICO

GROUPE SEB MÉXICO, S.A. de C.V.
Calle Goldsmith 38 401 Piso 4
Polanco, Distrito Federal C.P. 11560
México.
RFC GSM8211123P5

(01800) 112 83 25

U.S.A.

GROUPE SEB USA
2121 Eden Road
Millville, NJ 08332

800-769-3682

 : www.rowenta.com